



Copyright © 2014 Samsung Electronics Co., Ltd. All rights reserved. Samsung, the Samsung logo, and other marks are trademarks of Samsung Electronics Co., Ltd. in the U.S. and other countries.

Caution

- Do not place the system in the high-temp and humid environment, prevent it from rubbing or rough handling and strong shock.
- In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional guidance.
- In case fragments or other objects is accidentally operated inside the cabinet, please switch off the power immediately.
- In case of repair, Please come to the professional maintenance for help.
- Switch off the power and take off the plug from the power jack when the system is not in use.
- Keep it safe from water drops or splashing water, and no liquid container allowed to be put on its top side.
- Keep the cabinet cover far from the wall by 10cm or more and the air vent should not be blocked.

Package content

- Speaker 1 unit
- RCAR/RCU cable 1 pc
- 3.5mm to RCA cable 1 pc
- CGit signal input cable 1 pc
- Power cable 1 pc
- USB cable 1 pc
- Remote control 1 pc
- Operation manual 1 pc



Remote control



- Press the Power button to turn on.
- Press power to switch between modes, long press to enter into party mode, **Party** button quickly in party mode.
- Press master volume, range from 0 to 100.
- Press master volume button, short press to select position using and long press to select previous folder.
- Press master volume, range from 0 to 100.
- Press to select USB mode.
- Press to decrease subwoofer volume.
- Press to mute or unmute the sound.
- Press to select USB mode.
- Press USB mode and Bluetooth mode short press to play or pause the music.
- Press USB mode and Bluetooth mode short press to select next using and long press to select next folder.
- Press to select CGit/RCU mode.
- Press to select OPT/RCU mode.
- Press to select PC/Bluetooth mode.
- Press to increase subwoofer volume.

New features



- Press to power on/off the unit.
- Short press to Bluetooth mode, long press to enter into party mode, **Party** button quickly in party mode.
- Press this key to increase volume level.
- Press this key to increase volume level.
- Press to switch among audio sources (Bluetooth, CGit/RCU, OPT, Optical, USB, etc).
- Press to On/Off the settings mode for your TV. Refer to remote control operation for details.

Panel diagram



Product setting diagram



Operation guideline

Playback via Bluetooth

Basic Requirement

- Bluetooth must be activated on the mobile and device which you want to connect with PLS SoundBar.
- The mobile and device must support Bluetooth A2DP.
- The mobile and device must be within range of the PLS SoundBar (max. 10m).

Steps need to be followed

- Enter **Input**.
 - Long press the **Party**.
 - Party** appears on the display.
 - You need have 10 seconds to register your mobile and device.
 - Start the search on your mobile and device.
 - If the mobile device registers an external audio, please enter **BLUETOOTH**.
 - Once confirmed, the connection will be done automatically and **Party** appear in the display.
- Power on:**
- The device must be connected to the PLS System, connects automatically when Bluetooth is activated and the input for Bluetooth playback has been selected. In this case the message **Party** appear.
 - Start the playback of a medium on your mobile and device and the sound will automatically be generated by the PLS System.

USB mode

- Plug in USB cord.
- Connecter supporting max. 128GB as well as MP3/WMA that format decoding.
- Play mode (refer to remote control function)



Audio mode

- Short press to switch audio source to ARC mode. Connect the speaker with audio source through optical cable (output interface of television or PC, PC, Mobile, phone, etc).
- Adjust volume while playing mode.

Optical mode

- Short press to switch audio source to OPT mode. Connect the speaker with audio source through OPT signal cable (output interface of television or PC, PC, etc).
- Adjust volume while playing mode.



CGit mode

- Short press to switch audio source to CGit mode. Connect the speaker with audio source through CGit signal cable (output interface of television or PC, PC, etc).
- Adjust volume while playing mode.



Specifications

- Power output: 100W+100W (100W)
 Speaker unit:
 subwoofer: 2"
 Full range speakers: 2"
 Tweeter: 1"
- Frequency response: 20Hz-20KHz
 Current Consumption: 0.8W
 Power supply: 220V/50Hz-60Hz
 Separation: 100dB
 S/N: >100dB
 Product dimension: 1100x100x100mm

Troubleshooting

Problem	Possible Cause	Solution
Not playing music and not on	Power cable not connected to the power outlet or not plugged in.	Check connection.
Sound input when muted	Volume control system not turned on.	Turner the volume using the "Volume" button, increase the volume of the source device.
Not playing music and stopped in 10 seconds	The battery is empty.	Recharge battery, replace the battery, or turn on power.
No sound reproduction	No audio connection or playback stopped.	Check connection and playback operation.
	Audio connection not connected properly.	Check the connection of the source device.
	Audio connection not connected properly.	Check the connection of the source device.
	Audio connection not connected properly.	Check the connection of the source device.